

# Epson 1280 Reset Instructions

If both lights on front of the printer flash on and off alternately, the printer needs to be reset.



## To reset the printer:

- a) Turn the printer OFF
- b) Hold down buttons 2 and 3 then press and release button 1 to turn on printer. Both lights will now flash together (not alternating)
- c) Release button 2 (while still holding button 3)
- d) Wait 3 seconds then release button 3
- e) Wait another 3 seconds then press and HOLD button 3. The printer head will start to move
- f) Release button 3 and wait till printer finishes. Green light will be steady green.